

G113XX Lamp Assembly Instructions

For ages 3 and up.
Adult assembly required.

Instructions

Use 40 Watt Type A bulb, 120v 60hz AC only.


Customer Service

For questions regarding this product, or to receive replacement or missing parts, contact Customer Service at (800) 524-3555. Please have the model number and part number(s) located in this Assembly Instruction sheet available for reference.

Limited Warranty

All Guidecraft products are warranted to the original purchaser at the time of purchase and for a period of one (1) year thereafter. In order to provide you with timely assistance, please thoroughly inspect your product for missing or defective parts immediately after opening the carton. To receive replacement or missing parts under this warranty, contact Customer Service. You will also need your sales receipt or other proof of purchase.

Shade Assembly

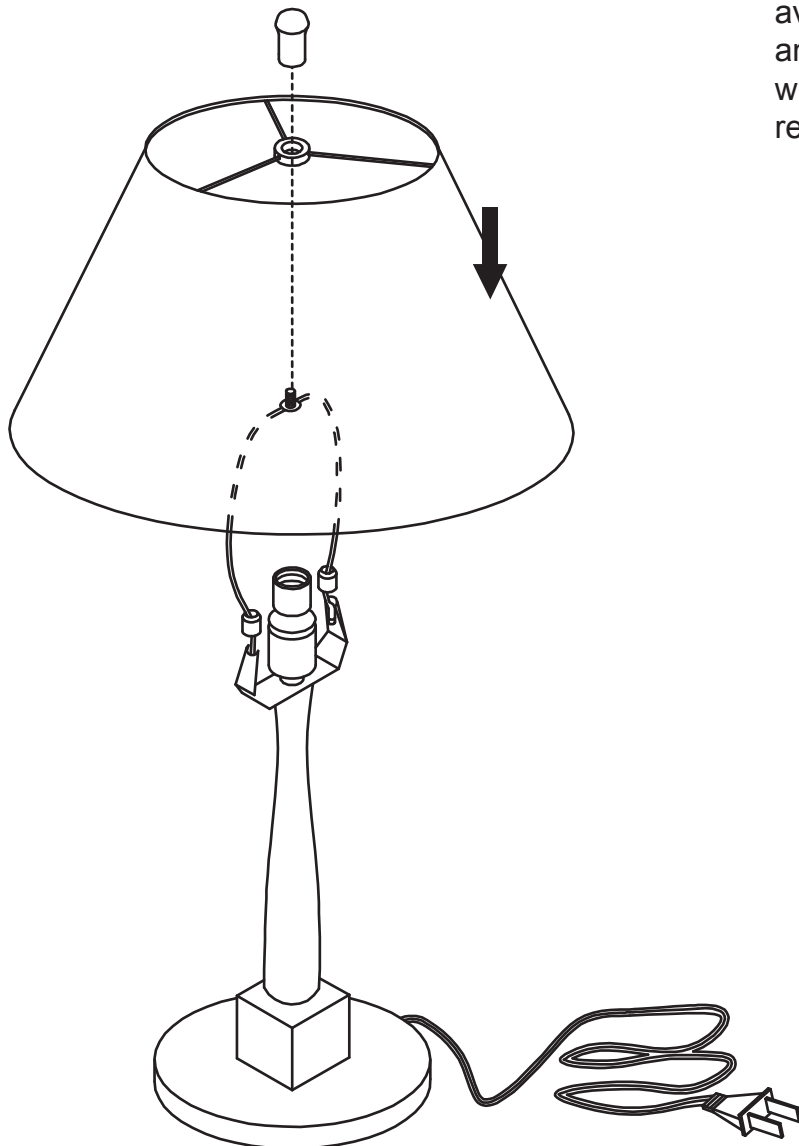

WARNING:

This is an electrical lamp - not a toy. To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.